### Xtra Long Life 10 million cycles

### **USB/Ethernet RF Switch Matrix RC-1SP4T-A18**

DC to 18 GHz **50**O

### The Big Deal

- Mechanical SP4T switch box
- High reliability, 10 million switch cycles
- 20W power rating (cold switching)
- High isolation, 85 dB typ

## **Applications**

- R&D
- Automated Test equipment
- · Controlling RF signal paths





AC/DC 24V Adapter

Descrip

USB/Et

USB-CBL-AB-3+ 2.7 ft USB cable

	Software Package
tyle: MR1853	
otion	Qty.
thernet RF Switch	1

1

1

1

### **RoHS Compliant**

AC Power Cord (see Ordering Information)

See our web site for RoHS Compliance methodologies and qualifications

### Product Overview

Mini-Circuits' RC-1SP4T-A18 is a general purpose RF switch matrix controlled via either USB or Ethernet-TCP/IP (supports HTTP and Telnet protocols). The model contains an electromechanical SP4T, absorptive fail-safe RF switch constructed in break-before-make configuration and powered by +24VDC, with switching time of 25 ms typical. The RF switch operates over a wide frequency band from DC to 18 GHz, has low insertion loss (0.2 dB typical) and high isolation (85 dB typical), making the switch matrix perfectly suitable for a wide variety of RF applications.

Model No.

RC-1SP4T-A18

AC/DC-24-3W1

CBL-3W1-XX

**Included Accessories** 

The RC-1SP4T-A18 is constructed in a compact, rugged metal case (5.5" x 6.0" x 2.25") with 5 SMA (F) connectors (COM and ports 1 to 4), USB type B port, standard RJ45 network socket and DC power input. Full software support is provided and can be downloaded from our website any time at https://www.minicircuits.com/softwaredownload/rfswitchcontroller.html. The package includes our user-friendly GUI application for Windows and a full API with programming instructions for Windows and Linux environments (both 32-bit and 64-bit systems). Also included is a 2.7 ft USB cable and AC/DC power adapter. Longer USB cables, Ethernet cables and a mounting bracket are available as optional accessories.

# **Key Features**

Feature	Advantages
Ethernet-TCP/IP- <b>HTTP</b> and <b>Telnet</b> Protocols (Supports DHCP and Static IP)	The RC-1SP4T-A18 switch matrix can be controlled from any Windows <sup>®</sup> , Mac <sup>®</sup> , or Linux <sup>®</sup> computer, or even a mobile device with a network connection and Ethernet-TCP/IP (HTTP or Telnet protocols) support. Using a VPN would allow remote control from anywhere in the world.
USB HID (Human Interface Device)	User may also control the switch matrix via USB connection. Plug-and-Play, no driver required. Compatible with Windows <sup>®</sup> or Linux <sup>®</sup> operating systems using 32 and 64 bit architecture.
RF SP4T absorptive electromechanical switch	Wideband (DC to 18 GHz) with low insertion loss (0.2 dB typ.), very high isolation (85 dB typ.), and high power rating (20W cold switching).
Switch Cycle Counters	Allows user to monitor the exact usage and plan test requirements accordingly.
Break-before-make configuration	Prevents the momentary connection of the old and new signal paths and reduces transient phenomena.

Trademarks: Windows is a registered trademark of Microsoft Corporation in the United States and other countries. Linux is a registered trademark of Linus Torvalds. Pentium is a registered trademark of Intel Corporation. Mac is a registered trademark of Apple Corporation in the United States and other countries. Neither Mini-Circuits nor the Mini-Circuits RC-1SP4T-A18 are affiliated with or endorsed by the owners of the above referenced trademarks Mini-Circuits and the Mini-Circuits logo are registered trademarks of Scientific Components Corporation.

Patents: Protected by US Patents 5,272,458; 6,414,577; 6,650,210; 7,633,361 and 7,843,289

Rev. D M171384 EDR-10927/10F6 RC-1SP4T-A18 RAV 181206 Page 1 of 8

www.minicircuits.com P.O. Box 350166, Brooklyn, NY 11235-0003 (718) 934-4500 sales@minicircuits.com



# **RC-1SP4T-A18**

### **Electrical Specifications**

Parameter	Port	Conditions	Min.	Тур.	Max.	Units
Frequency	All RF Ports	_	DC		18	GHz
Power On Sequence: Connect	the 24V power, follo	wed by the USB control and/or Ether	net cable befor	e turning on the	e Switch Matri	x.
		DC to 1 GHz	-	0.10	0.20	
RF Insertion Loss		1 GHz to 8 GHz	-	0.15	0.30	dB
RF INSERIOR LOSS		8 GHz to 12 GHz	-	0.25	0.40	UB
		12 GHz to 18 GHz	-	0.50	0.80	
		DC to 1 GHz	-	1.05	1.10	
RF VSWR <sup>1</sup>		1 GHz to 8 GHz	-	1.20	1.40	:1
		8 GHz to 12 GHz	-	1.20	1.40	
		12 GHz to 18 GHz	-	1.30	1.60	
		DC to 1 GHz	85	105	-	
RF Isolation		1 GHz to 8 GHz	80	100	-	dB
nr isolation		8 GHz to 12 GHz	75	95	-	uв
		12 GHz to 18 GHz	60	80	-	
Switching Time		-	-	25	-	ms
RF Power (cold switching) <sup>2,3</sup>		-	-	-	20	W
	04)/ IN	COM -> 1,2,3, or 4 state	-	160	230	
	$24V_{DC}$ IN	RF Switch @ Disconnect state	-	60	90	
Rated Current		COM -> 1,2,3, or 4 state	-	10	20	mA
	USB Port	RF Switch @ Disconnect state	-	10	20	
	24V <sub>DC</sub> IN	provided via external power adapter	23	24	25	
Rated Voltage	USB Port	_	-	5	-	V
		@ 100 mW (hot switching) <sup>4</sup>	10	-	-	million switching
Life (per switch)		@ 1 W (hot switching) <sup>4</sup>	-	1	-	cycles

For COM port only when connected to port 1,2,3, or 4. For ports 1,2,3 and 4 only when connected to COM port.
<sup>2</sup> Power handling is specified with RF applied to the COM port and external load connected to 1,2,3, or 4 ports.
<sup>3</sup> Cold switching describes switch operation where there is no significant user signal present at the moment the switch contacts open or close.
<sup>4</sup> Exceeding these limits will result in reduced life.

#### Absolute Maximum Ratings<sup>5</sup>

Operating Temperature	0°C to 40°C
Storage Temperature	-15°C to 85°C
DC Voltage max.	26V
RF power (through path)	20W
RF power (into internal termination)	1W


<sup>5</sup> Permanent damage may occur if any of these limits are exceeded.

#### Connections

24V <sub>DC</sub> IN	(2.1 mm center positive DC Socket)
RF Switch (1, 2, 3 4, COM)	(SMA female)
USB	(USB type B receptacle)
Network (Ethernet/LAN)	(RJ45 socket)


# **RC-1SP4T-A18**

### **Block Diagram**

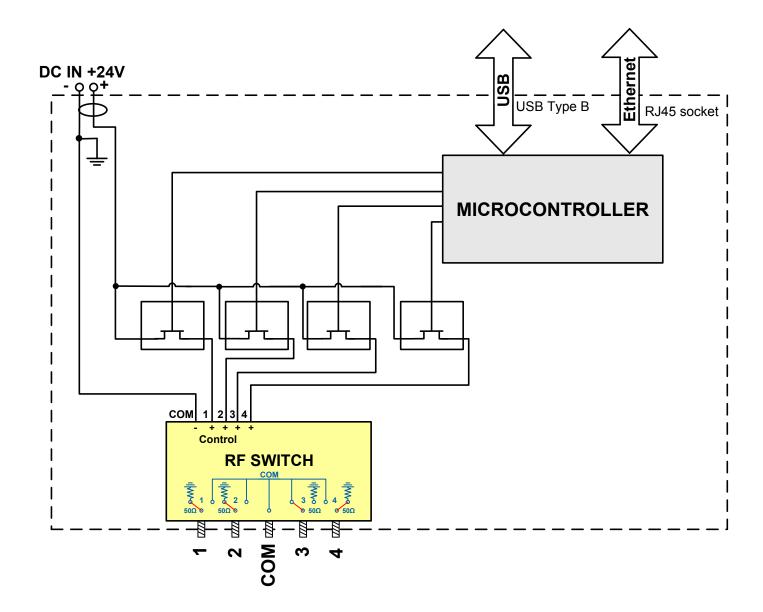

# **RC-1SP4T-A18**

### Outline Drawing (MR1853)

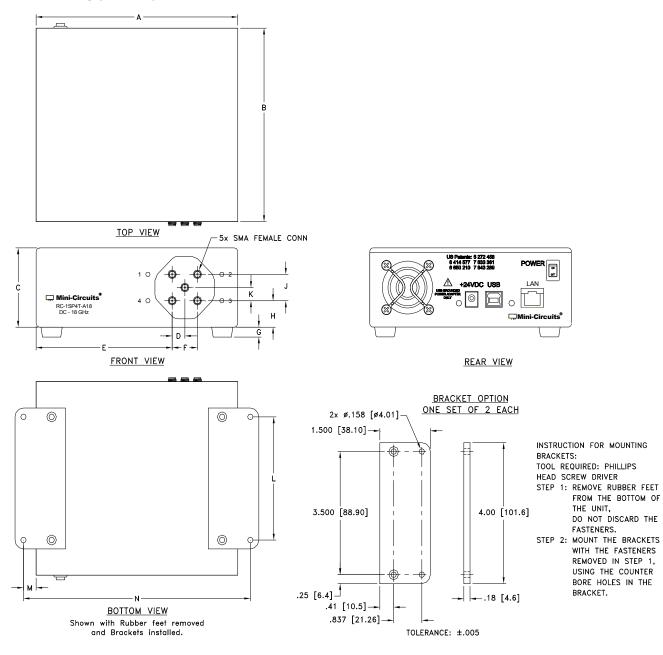



Outlin	e Dim	ensio	ons ( <sup>i</sup>	nch)									
А	В	С	D	E	F	G	Н	J	K	L	М	Ν	WT. GRAMS
6.00	5.50	2.25	0.38	4.05	0.75	0.75	0.75	.375	0.38	3.500	.375	6.75	830
152.4	139.7	57.2	9.65	102.9	19.05	19.05	19.05	9.52	9.65	88.9	9.52	171.4	030

# **RC-1SP4T-A18**

### **Configuration A: SP4T switch**

- Power handling is specified with RF applied to the COM port and output load connected to 1,2,3 or 4 of the switch.
- When connecting a coaxial semi flex cable, tighten connectors alternately using an 8 in-lb torque wrench to insure proper contact at each end.

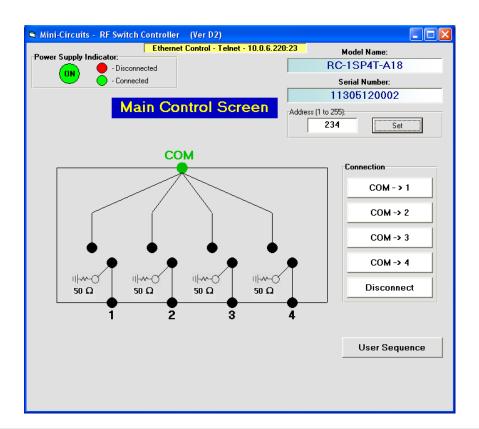

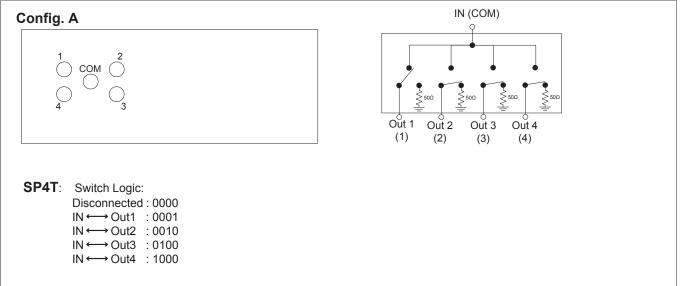

# **RC-1SP4T-A18**

### User Switching Sequence - for setting any configuration or sequence needed

- Power handling is specified with RF applied to the COM port and output load connected to 1,2,3 or 4 of the switch.
- When connecting a coaxial semi flex cable, tighten connectors alternately using an 8 in-lb torque wrench to insure proper contact at each end.

6	Mini-Ci	rcuits - RF Sw	itch Controller	(Ver D2) -	DEMO Mode				
			U	SB Control					
Г	8	Power Supply In	-			ITCHING S	EQUENCE		
	Help	( <mark>0 N</mark> )	- Disconnecte		Model Name:	10	Serial Number:		
-			💛 - Connected		RC-1SP4T-A	18	Not Exist		
Γ	Set Nan	ne:			🖻 🔒				
	Step	SW A			) Exec Program				
	Step 1	COM->1 COM->2		2					
-'3	Step 2 Step 3	DISCONNECT			o O monitor.exe				
	Step 4	COM->3		3					
	Step 5	COM->1		5					
	Step 6	COM->4		4	2				
		Add	Insert	Remov	e				
Į.	Run Sequ	Jence:			View Switch	es			
	Count	Linsity	Counter:	15					
			Elapsed (min):						
	I I ime L	.imits(min):	Liapsea (min).	0.18					
	-				Back to Main				
	Curren	t Step Con	tinuously	Stop	('Free-Control'	)			
							<u></u>		
						C	heck this box	to sho	w graphical
							esentation of		
			8	DC.	4CD 4T 440		ate(shown be	elow)	
			-	KC-	-1SP4T-A18				
					COM->2				
					${}}$				
				. 🖕 🖕	. 🖕 🖕				
				alino alino	o alino alino				
				1	2 3 4	ļ.			

- For instructions on using the GUI See the user guide on Mini-Circuits' website
- For programming instructions of the switch matrix see the programming guide and AN-49-001 on Mini-Circuits' website



#### Software & Documentation Download:

• Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from:

```
https://www.minicircuits.com/softwaredownload/rfswitchcontroller.html
```

Please contact <u>testsolutions@minicircuits.com</u> for support.

#### **Minimum System Requirements**

Parameter	Requirements						
Interface	USB HID or HTTP G	USB HID or HTTP Get/Post or Telnet protocols					
	GUI:	Windows 32 & 64 bit systems from Windows 98 up to Windows 10					
	API DLL (USB)	Windows 32 & 64 bit systems with ActiveX or .Net support from Windows 98 up to Windows 10					
System requirements	USB interrupt API	Linux, Windows systems from Windows 98 up to Windows 10					
	Telnet & HTTP	Any Windows, Mac, or Linux computer with a network port and Ethernet-TCP/IP (HTTP or Telnet protocols) support					
Hardware	Pentium <sup>®</sup> II or highe	r					

# Graphical User Interface (GUI) for Windows Key Features:

- Set each switch manually
- Set timed sequence of switching states
- Configure switch address and upgrade Firmware

Mini-Circuits - RF Switch Controller (\	/er E0)	- 🗆 X
Run Program - USB Control:	Run Program - Ethernet Control:	Run Program in Demo Mode
USB	Device Ethernet Prameters:	Select Model: RC-1SP4T-A18
	C Use Telnet (port 23)	

### Steps to start RC-1SP4T-A18 GUI via USB

Click on USB button.

• If more than one unit is connected select S/N from list and click OK.

• Start working.

### Application Programming Interface (API) Windows Support:

- API DLL files exposing the full switch matrix functionality.
  - ActiveX COM DLL file for creation of 32-bit programs
  - .Net library DLL file for creation of 32 / 64-bit programs
- HTTP Get/Post and Telnet protocols use SCPI commands to provide full control.
- Supported by most common programming environments (refer to application note <u>AN-49-001</u> for summary of tested environments)

#### Linux Support:

 Full switch matrix control in a Linux environment is achieved by way of USB interrupt commands. See programming manual at <u>https://www.minicircuits.com/softwaredownload/Prog\_Manual-2-Switch.pdf</u> for details

# www.minicircuits.com P.O. Box 350166, Brooklyn, NY 11235-0003 (718) 934-4500 sales@minicircuits.com

### Steps to start RC-1SP4T-A18 GUI via Ethernet

- Click on search icon.
- · Select unit from list of IP addresses and click select
- The selected IP will appear in the IP Address field.
- Select communication protocol (Telnet or HTTP)
- Click on Start and begin working.



### Ordering, Pricing & Availability Information see our web site

Model	Description						
RC-1SP4T-A18	USB/Ethernet RF SP4T Switch Matrix						
Included Accessories	Part No.	Description					
	AC/DC-24-3W1	AC/DC 24V <sub>DC</sub> Grounded Power Adaptor. Operating temperature: 0°C to +40°C, I <sub>Max</sub> =2.5A					
	CBL-3W1-XX	AC Power Cord (Select one power cord from below with each Switch Matrix box)					
	USB-CBL-AB-3+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)					

AC Power Cords <sup>6</sup>	Part No.	Description
2	CBL-3W1-US	Power Cord for United States
	CBL-3W1-EU	Power Cord for Europe
	CBL-3W1-UK	Power Cord for United Kingdom
er l	CBL-3W1-AU	Power Cord for Australia and China
	CBL-3W1-IL	Power Cord for Israel

6. Power cords for other countries are also available, if you need a power cord for a country not listed in the table please contact testsolutions@minicircuits.com.

<b>Optional Accessories</b>	Description
USB-CBL-3+ (spare)	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-7+	6.8 ft (2.1 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-11+	11 ft (3.4 m) USB Cable: USB type A(Male) to USB type B(Male)
CBL-RJ45-MM-5+	5 ft (1.5 m) Ethernet cable: RJ45(Male) to RJ45(Male) Cat 5E cable
BKT-272-08+	Bracket (One set of 2 each)

#### **Additional Notes**

- A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
- B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions.
- C. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms"); Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuits' website at <u>www.minicircuits.com/MCLStore/terms.jsp</u>