

**SPECIFICATION SHEET**

**JFW MODEL 50BA-025-62**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Frequency Range	100 MHz-40 GHz
Configuration	Two individually controlled solid-state programmable attenuators.
Enclosure Type	Mini-benchtop
Impedance	50 Ohms nominal
Attenuation Range	0-62 dB in 1 dB steps
Startup/Default States (configurable)	Attenuators to 62dB at startup (see ATTEN command) DHCP enabled (see NET command) 4 Ethernet users (see NET command) Prompts off (see PROMPT command)  All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.
VSWR	1.6:1 typical 100MHz-18 GHz 1.8:1 typical 18-26.5 GHz 2.2:1 typical 26.5-40 GHz 2.8:1 maximum 100MHz-40 GHz
Attenuation Accuracy (Referenced to Insertion loss)	0-31dB ± 1.0 dB typical 100MHz-18 GHz ± 1.5 dB typical 18-26.5 GHz ± 2.0 dB typical 26.5-40 GHz ± 3.5 dB maximum 100MHz-40 GHz  31-48dB ± 2.0 dB typical 100MHz-18 GHz ± 2.0 dB typical 18-26.5 GHz ± 4.0 dB typical 26.5-40 GHz ± 5.0 dB maximum 100MHz-40 GHz  49-62dB ± 3.0 dB typical 100MHz-18 GHz ± 3.0 dB typical 18-26.5 GHz ± 4.0 dB typical 26.5-40 GHz ± 8.0 dB maximum 100MHz-40 GHz
Insertion Loss	4.0 dB typical @ 100MHz 5.5 dB typical @ 3 GHz 8.0 dB typical @ 8 GHz 11.5 dB typical @ 18 GHz 15.0 dB typical @ 26.5 GHz 18.0 dB typical @ 40 GHz
RF Input Power	+20 dBm average +25 dBm (0.1dB compression)

**--CONTINUED--**

**SPECIFICATION SHEET**

**JFW MODEL 50BA-025-62**

**PROGRAMMABLE ATTENUATOR ASSEMBLY**

JFW Industries, Inc.  
Phone: 317-887-1340  
sales@jfwindustries.com  
www.jfwindustries.com

Switching Speed 1 microsecond typical  
(after command is received and processed)  
(3 milliseconds typical processing time)

DC Supply +12 Vdc  
(100-240 VAC AC/DC transformer included)

Manual Control Momentary Lever Actuator Switch with  
7-Segment LED Displays  
(tap to step, hold to jog)  
(jog speed range is 0-10)  
(jog speed set to 0 will disable all levers)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)  
RS-232 (up to 115200 Baud)

Remote Commands Attenuator Control Commands:  
Atten, Set Attenuator, Read Attenuator, Set All  
Attenuators, Read All Attenuators, Read All Extended,  
Fade Attenuator, Variable Attenuator Handover, Block,  
Set Block, Read Block, Read All Blocks, Fade Block,  
Variable Block Handover

System Commands:  
Help, Identification, Store, Recall, Pause, Net,  
Serial, Close, Disconnect, MOTD, Date, Message,  
Restrict, IDENT, Name, Show Users, Reboot, Uptime,  
Prompt

RF Connector 2.92mm female

Operating Temperature Range 0°C to +50°C

Physical Size See Outline Drawing 092-8743

ECR/ECN #	DATE	REV	APPR / DATE	ECR/ECN #	DATE	REV	APPR / DATE
	11/15/2016		BAC 11/15/2016				