




RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz

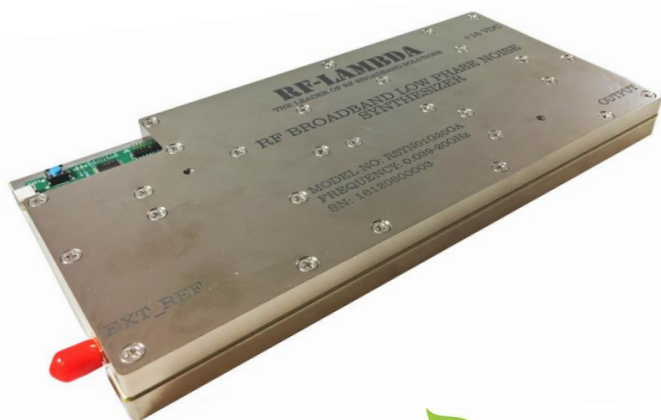

Summary

RSYN01G20GA is a wide range tunable RF synthesizer. It uses advanced VCO and DDS based phase lock technology to provide T&M level of phase noise. The unit uses an internal temperature compensated crystal oscillator as the referenced signal to the PLL. The unit can also be locked to an external 10MHz reference source. The output power is calibrated and stabilized with good accuracy.

Typical Applications

- Wireless Infrastructure
- RF Microwave & VSAT
- Military & Aerospace
- Test and Measurement
- Fiber Optics

Electrical Specifications

Frequency	39MHz-22GHz	Output Power Typical	10dBm
Frequency stability	+/-0.5ppm	Output Power Tuning range	31.5dB with 0.5dB step
Frequency Aging	+/- 3ppm (10 years)	Output Power Linearity	+/- 0.5dB
Reference tuning range	+/-100ppm	Output Power Accuracy	+/- 1.5dB
Tuning Step	0.001Hz	SFDR 1MHz Tuning Step	65dBc
Phase Noise @ 10GHz Typical	-116dBc/Hz (@10KHz) -117dBc/Hz (@100KHz) -118dBc/Hz (@1MHz) -140dBc/Hz (@10MHz)	2 nd Harmonic	-30dBc
Power Supply Voltage	110 / 240V AC	3 rd Harmonic	-35dBc
USB	USB 2.0	EXT Reference Input Level	0dBm to 10dBm



Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz



RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

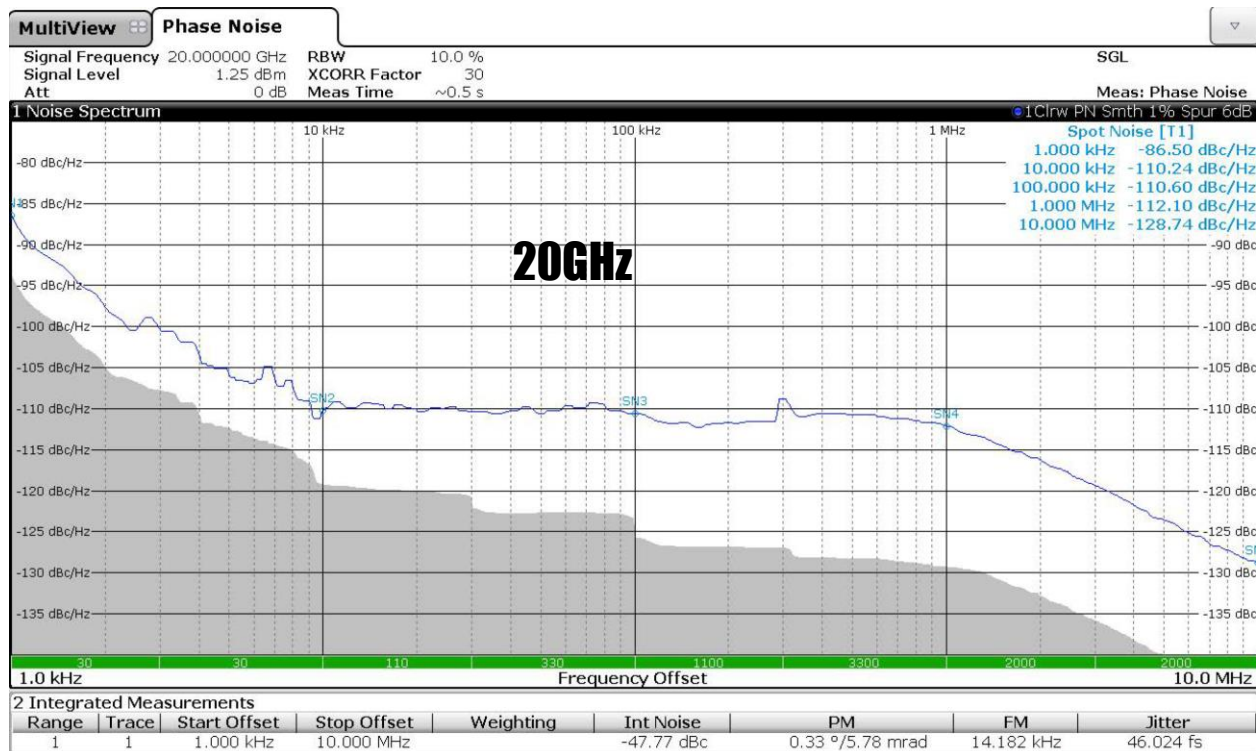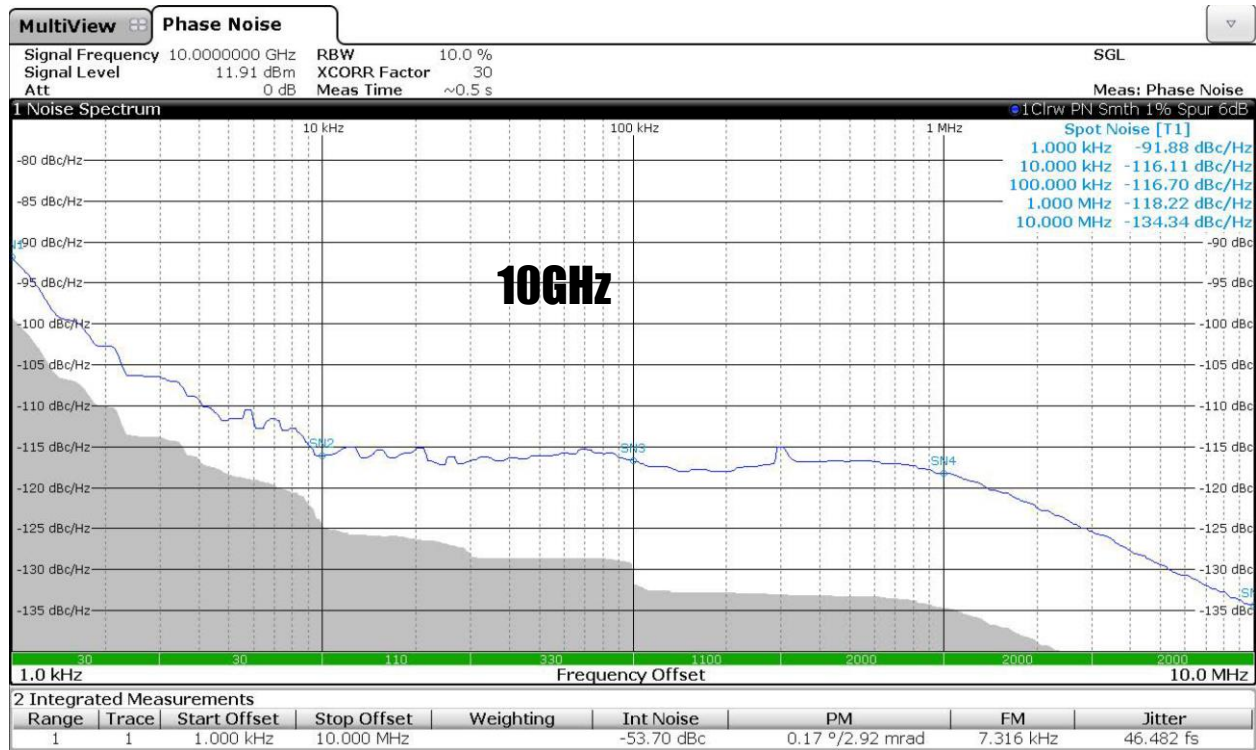



Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz



RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

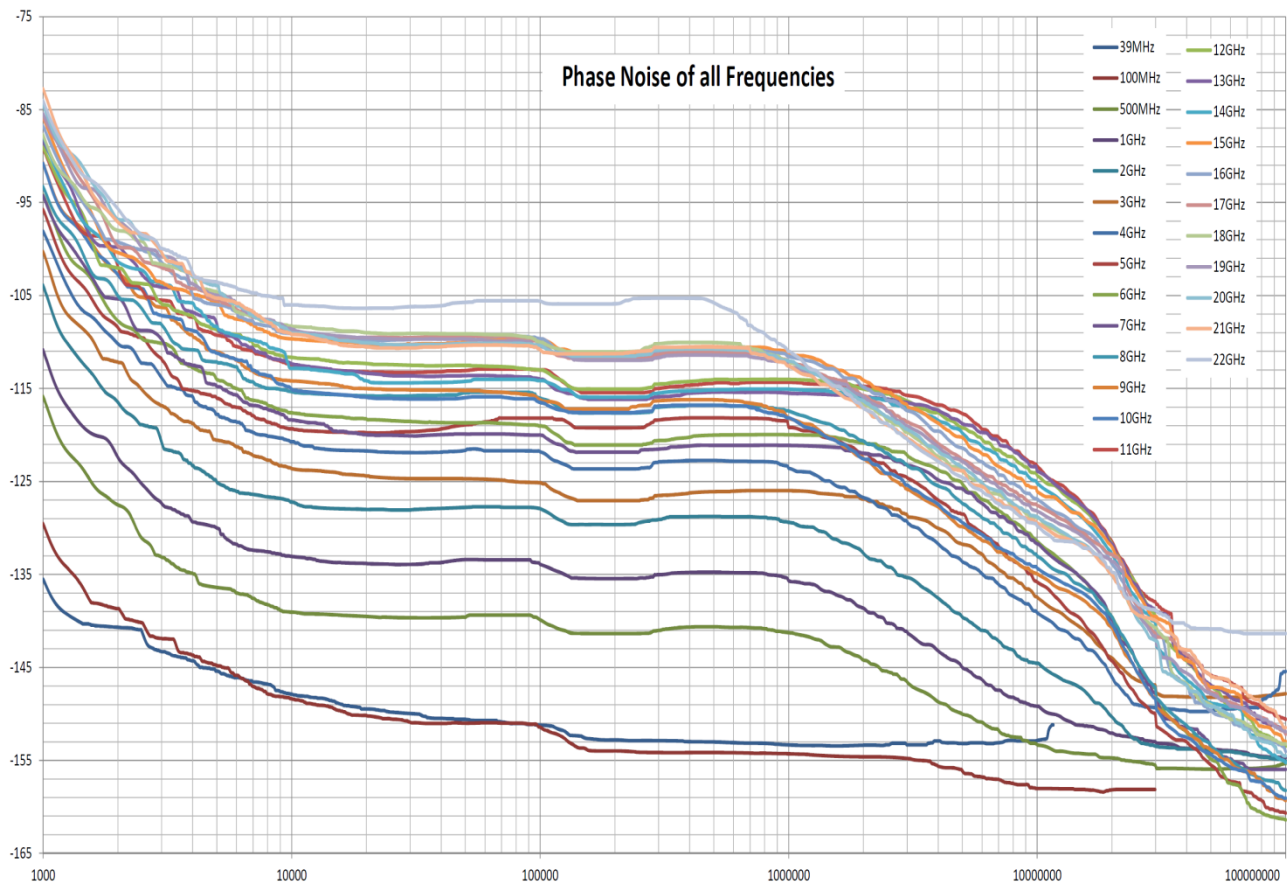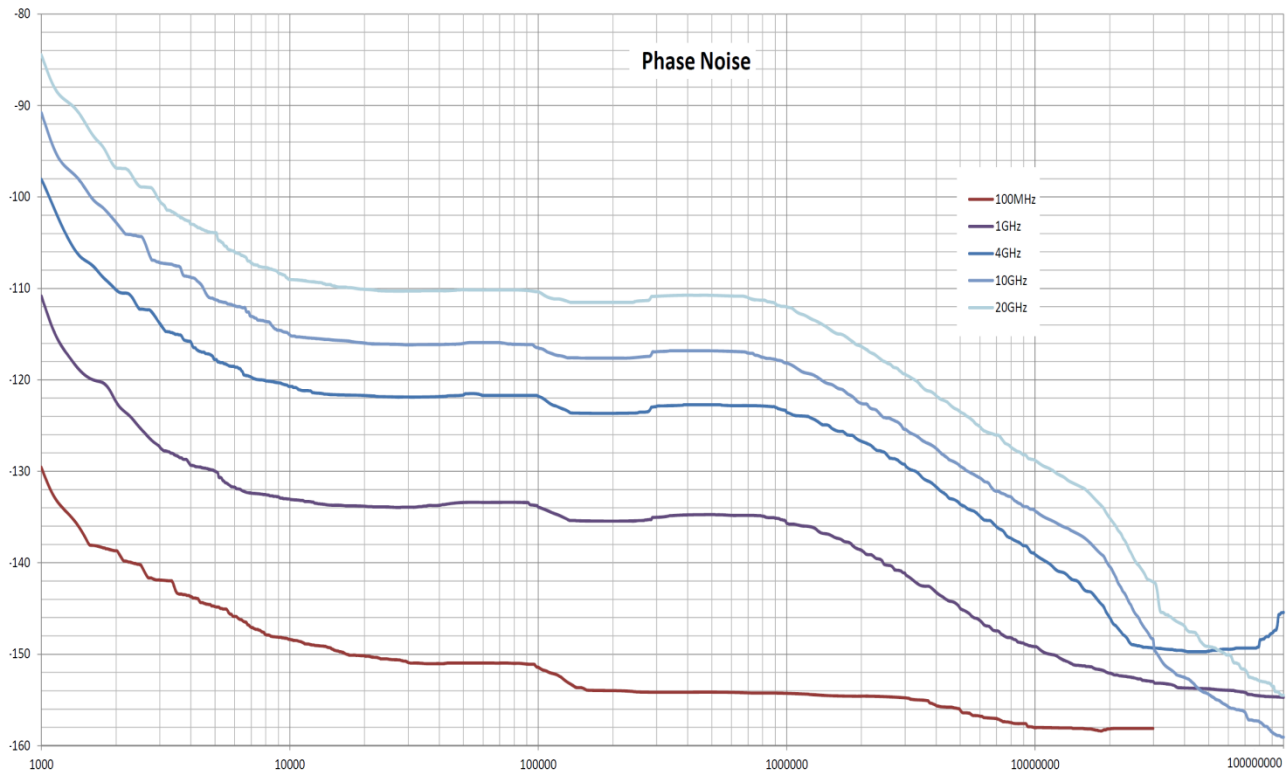

Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz




RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS


RSYN01G20GA

Phase Noise Comparison

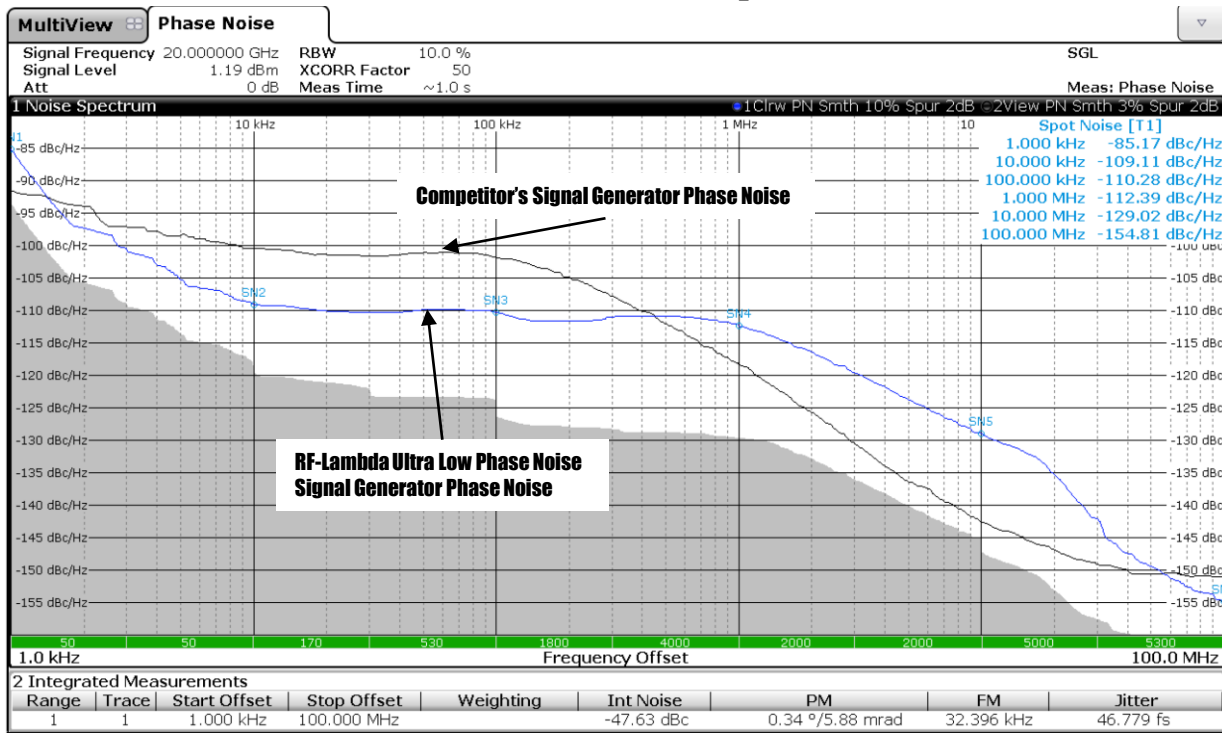

Video Instruction Link:

http://www.rflambda.com/product_signalgenerator.jsp

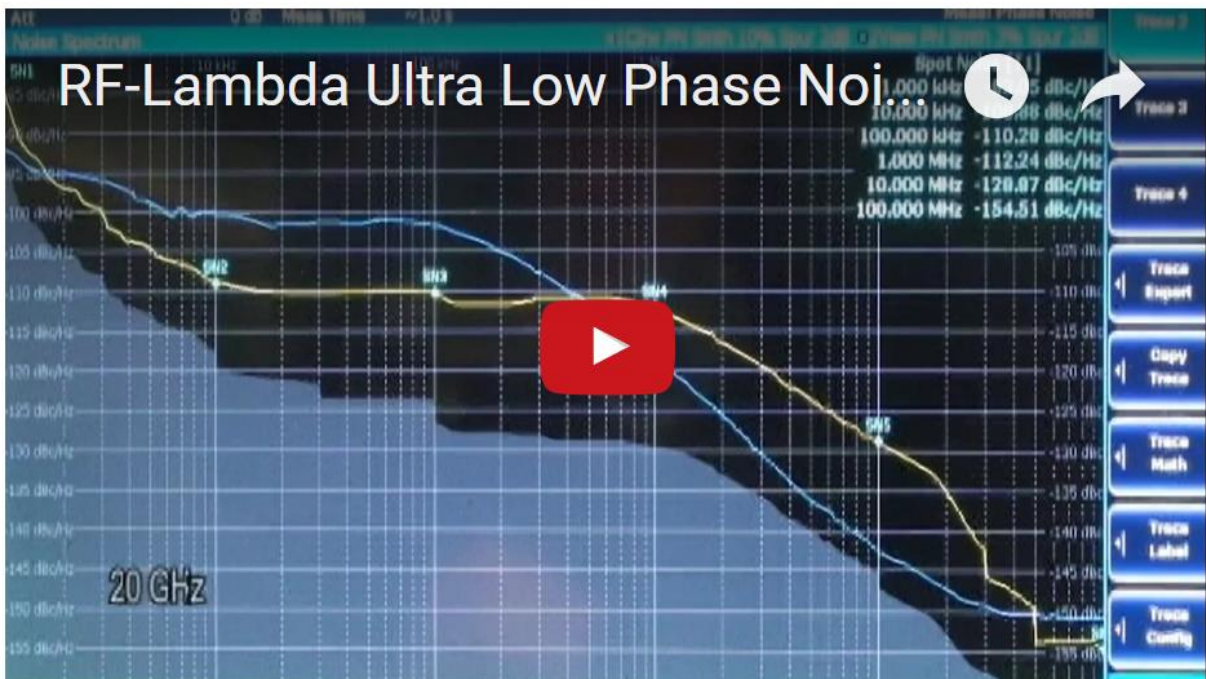

Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz




RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

Harmonics Chart

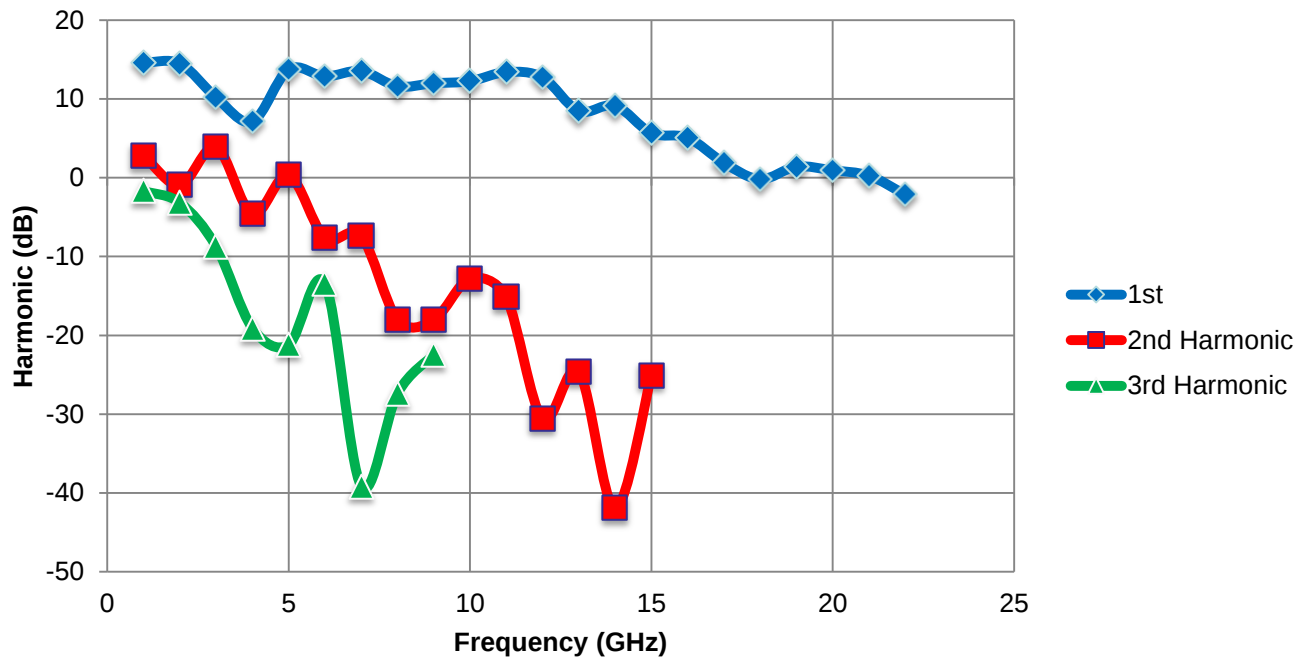


Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz




User Instructions:


1. Install the SW below on the control PC
 - a. Visual C++ Redistributable Packages for Visual Studio 2013
<https://www.microsoft.com/en-us/download/details.aspx?id=40784>
 - b. Visual Studio 2010 Tools for Office Runtime
<https://www.microsoft.com/en-us/download/details.aspx?id=48217>
 - c. Microsoft .NET Framework 4.6.2
<https://www.microsoft.com/en-us/download/details.aspx?id=53344>
2. Install the USB Driver under this directory:
\\RF-Lambda SG Utility_Rev_2.0\\Installation Software\\USB Driver \\
USBXpressInstaller_x64.exe



3. Open “RF-Lambda SG Utility_Rev_2.0.exe”
\\RF-Lambda SG Utility_Rev_2.0\\RF-Lambda SG Utility_Rev_2.0\\
RF-Lambda SG Utility_Rev_2.0.exe



4. The program will look like this:

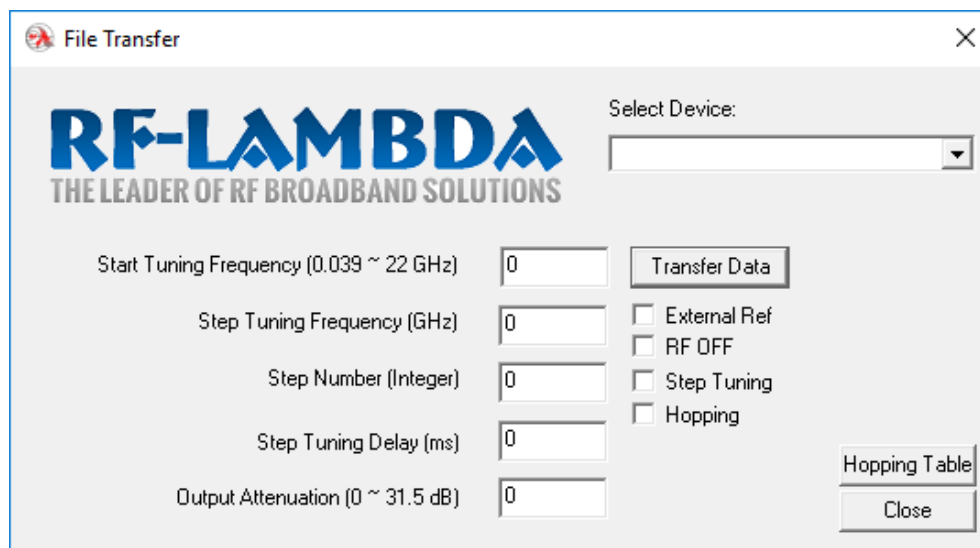



RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

5. Turn on the +15V power supply. The part number, serial number, and revision number will show up in the top right corner.

6. You can reduce the output power by entering an attenuation: (0.5dB to 31.5dB, 0.5dB per step, ex: 0.5dB, 1.0dB, 1.5dB... etc)

7. You can enable the external ref input by clicking here:

Single Frequency Mode

- a. Change the frequency (0.039 ~ 22GHz) here and then click Transfer Data:

Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz



Step Tuning Mode

$\text{Tuning Frequency} = \text{Start Tuning Frequency} + \text{Step Tuning Frequency} * \text{Step Number (Integer)}$

Example:

If you want 1,3,5,7,9 GHz frequency changing every 5000ms.

Start Tuning Frequency (0.039 ~ 22 GHz)	1	Transfer Data
Step Tuning Frequency (GHz)	2	☐ External Ref
Step Number (Integer)	4	☐ RF OFF
Step Tuning Delay (ms)	1500	☒ Step Tuning
Output Attenuation (0 ~ 31.5 dB)	0	☐ Hopping

- a. Check Step Tuning check box.

☒ Step Tuning

- b. Put the start frequency in this box (0.039 ~ 22GHz).

Start Tuning Frequency (0.039 ~ 22 GHz)	0
---	--------------------------------

- c. Put the frequency step in this box (GHz)

Step Tuning Frequency (GHz)	0
-----------------------------	--------------------------------

- d. Put Step Number (Integer).

Step Number (Integer)	0
-----------------------	--------------------------------

- e. Put the delay time between each frequency (ms)

Step Tuning Delay (ms)	0
------------------------	--------------------------------

- f. Click Transfer data.



RF-LAMBDA


LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA


Frequency Hopping Mode

The tuning frequency can follow the tuning table.


- a. Select hopping check box.



- b. Click hopping table button on the bottom right corner.

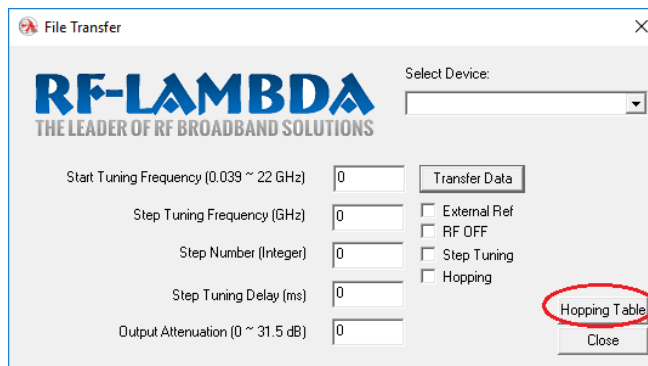

- c. Change the variables in the pop out window, make sure to hit “Enter” ever time after change the values, and input “END” in the finish line after the last hopping frequency.

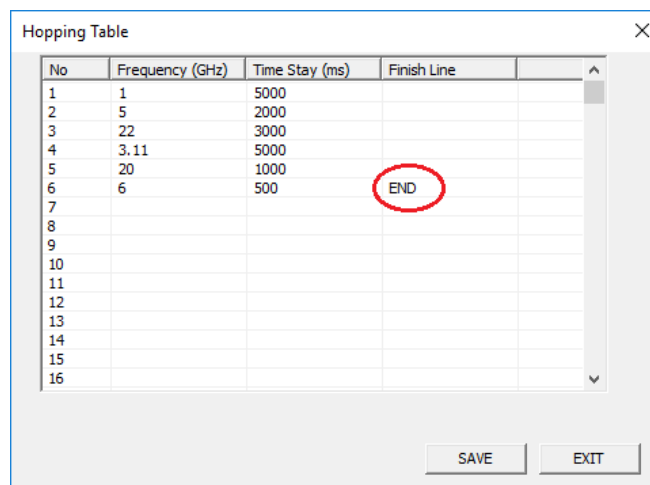

Ultra Low Phase Noise USB Controlled RF Synthesizer 0.039-22GHz



- d. Click the “SAVE” button after finished inputting the data, and then click “EXIT”.

No	Frequency (GHz)	Time Stay (ms)	Finish Line
1	1	5000	
2	5	2000	
3	22	3000	
4	3.11	5000	
5	20	1000	
6	6	500	END
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			

- e. Click “Transfer Data” button start frequency hopping.

File Transfer

RF-LAMBDA
THE LEADER OF RF BROADBAND SOLUTIONS

Select Device: RSYN01G20GA:SN00007_Rev:3.41

Start Tuning Frequency (0.039 ~ 22 GHz) 0

Step Tuning Frequency (GHz) 0

Step Number (Integer) 0

Step Tuning Delay (ms) 0

Output Attenuation (0 ~ 31.5 dB) 0

☐ External Ref

☐ RF OFF

☐ Step Tuning

☒ Hopping

Transfer Data

Hopping Table

Close




RF-LAMBDA

LEADER OF RF BROADBAND SOLUTIONS

RSYN01G20GA

Outline Drawing:

All Dimensions in mm [inches]

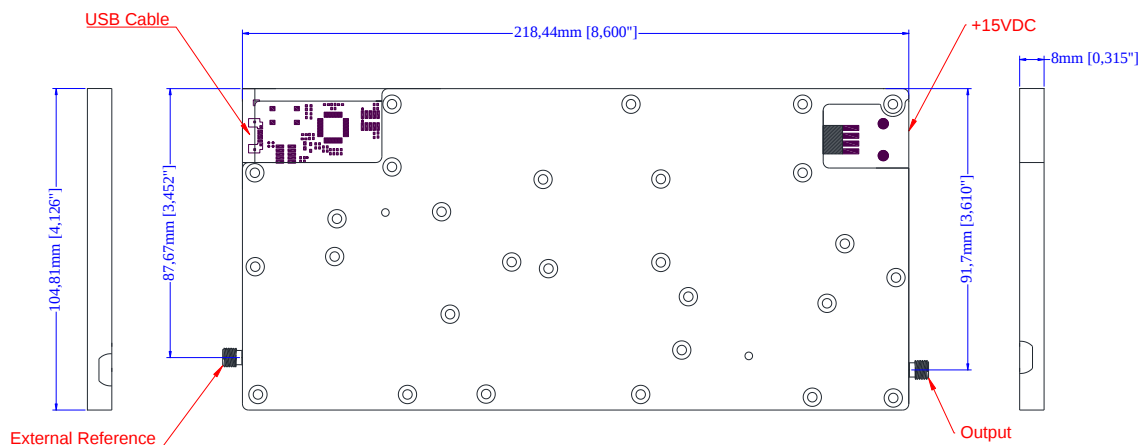

Heat Sink and cooling fan required during operation



Important Notice

The information contained herein is believed to be reliable. RF-Lambda makes no warranties regarding the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for any of the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for the use of the information contained herein. The information contained herein is provided "AS IS, WHERE IS" and with all faults, and the entire risk associated with such information is entirely with the user. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for RF-Lambda products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information.

RF-Lambda products are not warranted or authorized for use as critical components in medical, life-saving, or life sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.